

Cloning Set (seeds)

Cloning Set includes

- 1.77-void insert
- 2.15-void insert
- 3. Greenhouse top cover (frame and acryl glass)
- 4. 100 x cutting discs
- 5.8 x magnets



For a successful plant cultivation healthy and strong plants are a prerequisite. With the KKfarming cloning set, you create an ideal climate in your AeroBox to propagate cuttings. Without the use of root hormones, roots will form easily. Thanks to the 15-void insert you can also germinate seeds directly in the net pots. And there is no waste, because after a thorough cleaning all parts of the cutting set can be reused.

Cultivation from seeds

- 1. Fill up the water reservoir of your AeroBox with pH-regulated water up to 3 cm below the sealing holes.
- 2. Attach the 15-void insert to the root vessel by means of the magnets.
- 3. Fill up the net pots with hydrocorrels and add the seeds of your choice. How deep you should plant your seeds depends on whether they need light to germinate or not, but also on your lighting.



Note: We recommend to soak the hydrocorrels in pH-regulated water for 24 hours, to ensure that they have the same pH-value as the nutrient solution. In many cases, a pH between 5.2 and 5.5 is optimal.






- 4. Then attach the net pots to the 15-void insert. Make sure to put a filled net pot in each void, also if it is unused, so the fog can not reach the space above the insert.
- 5. Inlay the acrylic glass into the frame of the greenhouse top cover and place it on top of your AeroBox.

6. Operate your AeroBox as described in the main instruction. Please note that it is necessary to operate the high pressure pump in intervals.

Note: Regularly air the AeroBox to prevent it of mould. To do this, remove the greenhouse cover daily for 5-10 minutes if possible.

- 7. The acryl glass will bend slightly, whereby a small air slit will be formed. As soon as about 2-5cm long roots look out of the net pots, slowly reduce the humidity in the next one to two days by moving, twisting or turning the loose acryl glass. Finally, remove the acryl glass completely.
- 8. After removing the acryl glass, you can remove the cloning set and put the net pots in the perforated top cover as usual. Now is the time to start adding fertilizers.

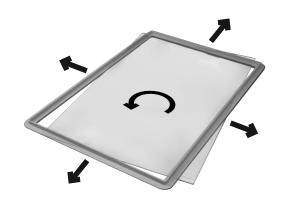



Water/nutrient solution

If you operate your AeroBox with the cloning set, it is advisable to use only pH-regulated water. Germinating seeds and freshly cut, unrooted cuttings do not need any additional nutrients.

Cleaning/Reuse

All parts of the cloning set are reuseable after thorough cleaning. Cleaning with warm water could be sufficient. If you use additional cleaning supplies, be aware they could have an negative effect on your plants.

If you have any further questions about operating the AeroBox, have a look at the AeroGuide at www.kkfarming.com/en/guide/aero-guide/ or contact us directly at: office@kkfarming.com

ATTENTION - Life threatening situation!



Before servicing your AeroBox, make sure all power plugs have been removed. High voltage can cause life threatening events.

ATTENTION - Magnets



The magnets oncluded in your set of cuttings can damage electronic devices and magnetic data mediums permanently. Keep the magnets away from such devices.

People with pacemakers or implanted defibrillators should stay clear of magnets.

Commercial Register Number.: FN 482950 x CR-court: Landesgericht Wiener Neustadt

UID-Nr.: ATU72951308

E-Mail: office@kkfarming.com Website: www.kkfarming.com